



NOTES

1. The bicycle detector pavement marking (symbol) shall be used at all actuated traffic signal approaches that are capable of detecting bicycles.
2. A symbol shall be installed in the right-most lane serving the bicyclist's destination, including left turn lanes, through lanes, and bike lanes.
3. Center the symbol in the lane (aligned with lane assignment arrow).
4. The leading edge of the symbol shall be installed one foot behind the crosswalk (or limit line, if there is no crosswalk).
5. On Approaches with marked crosswalks and advanced limit lines, the symbol should be placed between the crosswalk and advanced limit line.

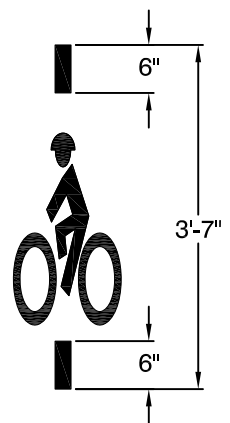

**BICYCLE DETECTOR SYMBOL
(CA MUTCD, FIGURE 9C-7)**

NOT TO SCALE



CITY OF OAKLAND

DEPARTMENT OF TRANSPORTATION | SAFE STREETS DIVISION
BICYCLE & PEDESTRIAN PROGRAM
250 FRANK H. OGAWA PLAZA, SUITE 4314 * OAKLAND CA, 94612
EMAIL: blkeped@oaklandca.gov

**BICYCLE DETECTOR
PAVEMENT MARKING**

**ROADWAY MARKING
DETAILS**

SCALE: NTS

DWG. NO.

RM-3

DATE: MAR 2021